



# Next Generation Control - Net Share

Scan code to get the latest version of this document




Translation Available



This procedure tells you about the settings for Net Share.

## STEP 1

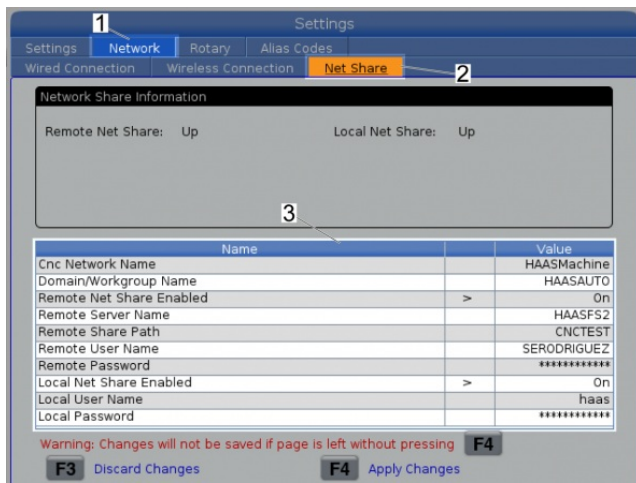

Push **[SETTING]**.

Select the **Network** tab [1].

Select the **Net Share** tab [2].

Go to Step 2 for more information on these settings.

## STEP 2

<b>Remote Net Share</b>	A <b>Remote Net Share</b> connection gives the control access to a shared folder on the network.
<b>Local Net Share</b>	A <b>Local Net Share</b> connection gives a computer on the network access to the control's <b>User Data</b> directory.

### Remote Net Share


	Value	Meaning
<b>Remote Net Share</b>	<i>UP</i>	The machine is connected to a shared folder on the network. Push <b>[List Prog]</b> . Select <b>Net Share</b> to folder.
<b>Remote Net Share</b>	<i>DOWN</i>	The machine is not connected to a shared folder on the network.

### Local Net Share

	Value	Meaning
<b>Local Net Share</b>	<i>UP</i>	The <b>User Data</b> directory on the control is accessible to computers on the network. Remote users can log in and access files on the <b>User Data</b> folder. Use the <b>Local User Name</b> and the <b>Local Password</b> to log in from a computer.
<b>Local Net Share</b>	<i>DOWN</i>	The <b>User Data</b> directory on the control is not accessible to computers on the network.

## STEP 3

### Network Share Settings

Setting Name	Value
<b>CNC Network Name</b>	The name of the machine on the network. The default value is <b>HAASMachine</b> , but you must change this so that each machine on the network has a unique name.
<b>Domain/Workgroup Name</b>	The name of the <b>Domain</b> or <b>Workgroup</b> that the machine belongs to.
<b>Remote Net Share Enabled</b>	Activates or deactivates <b>Net Share</b> on the machine.
<b>Remote Server Name</b>	The remote network name or IP address of the computer that has the shared folder.
<b>Remote Share Path</b>	The name of the shared folder on the network.  <b>Note:</b> Do not use spaces in the shared folder name. The full path of the shared folder is not necessary. Only enter the name of the shared folder. Do not use forward slashes.
<b>Remote User Name</b>	The <b>User Name</b> that is used to log in to the remote server or domain. User names are case-sensitive and cannot contain spaces.
<b>Remote Password</b>	The password to use to log in to the remote server. Passwords are case-sensitive.
<b>Local Net Share Enabled</b>	Activates and deactivates access to the <b>User Data</b> directory on the control.
<b>Local User Name</b>	The <b>Local User Name</b> is " <b>haas</b> " and cannot be changed. This is the user name that is used when you log into the <b>User Data</b> directory on the control from a network computer.
<b>Local Password</b>	Create and enter a password in this setting. This password is used when you log into the <b>User Data</b> directory on the control from a network computer.

### Function Keys

Function key	Action
<b>[F3] Discard Changes</b>	Push <b>[F3]</b> to discard all changes made to the field boxes.
<b>[F4] Apply Changes</b>	Push <b>[F4]</b> to apply the changes made to the field boxes

## STEP 4

Do this step to enter a value for **CNC Network Name**.

Select **CNC Network Name**.

Enter a unique name for the machine.



Push **[Enter]**.

## STEP 5

Do this step to enter a value for **Domain/Workgroup Name**.

Select **Domain/Workgroup Name**.

Enter the domain/workgroup name network name.



Push **[Enter]**.

## Conclusion

To set up local net share, refer to [Next Generation Control - Net Share - Local](#).

To set up remote net share, refer to [Next Generation Control - Net Share - Remote](#).