



# Remote Jog Handle (RJH-C) - Installation

Scan code to get  
the latest version  
of this document



Translation  
Available



## Remote Jog Handle (RJH-C) - Installation

This procedure tells you how to install a Remote Jog Handle (RJH-C) during initial machine installation.



### Prerequisites

To install the RJH after initial machine installation, refer to [Remote Jog Handle \(RJH-C\) - Service Kit - Installation.](#)

## Machine Compatibility

Do this procedure for these machines:

- All Machines

## Parts Included

KIT PN: 30-1069B, RJH COLOR LCD, HAND UNIT PACKAGED. QTY: 1



**[A]** 30-30398A  
QTY: 1  
RJH-C HAND UNIT



**[B]** 28-0052A QTY: 1  
MAGNIFIER, RJH-C




**[C]** 41-0044 QTY: 2  
BOLT, PPHS PLASK #1 4-14 X 3/4 #5  
HD BLK OX



**[D]** 74-1919 10FT  
CABLE, COIL CORD RJ12  
CONNECTOR 10.0 FT

## STEP 1

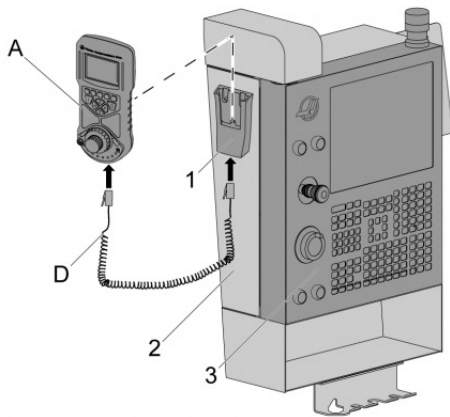

The holster [1] for the RJH-C is on the left side of the storage cabinet [2] (as shown).


If the machine has no storage cabinet, the holster is on the right side of the pendant [3].


Connect one end of the RJ12 COIL CORD [D] to the receptacle on the bottom of the holster.

Connect the other end to the receptacle to the bottom of the RJH-C [A].

Refer to [Remote Jog Handle \(RJH\) - Operation](#) for operation instructions

## STEP 2

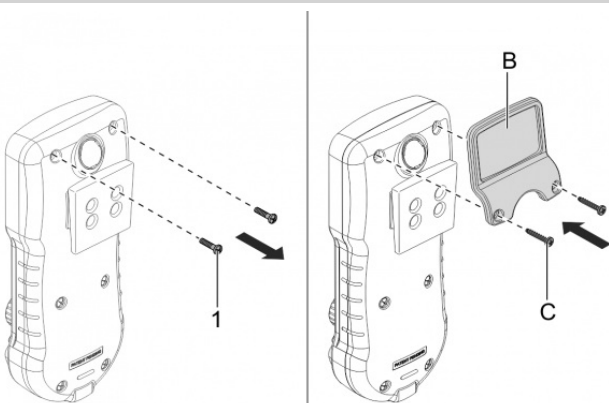


 **Note:** Installation of the magnifier is optional.

Remove the (2) top screws [1] on the back of the RJH.

Attach the RJH-C MAGNIFIER [B].

Use the supplied longer Phillips head SCREWS [C].

 **Caution:** Do not remove the other screws.